



INSTRUCTION MANUAL



Monomatic
Monomatic Data USB
Monomatic (Bluetooth)
Monomatic Data USB (Bluetooth)

SmartFuse electrofusion control unit

SmartFuse electrofusion control unit with
Bluetooth functionality

Table of contents

1.	Safety	5
1.1	General safety guidelines for power tools.....	5
1.2	Specific safety guidelines for the electrofusion control unit.....	6
2.	Introduction	8
2.1	Scope of application.....	8
2.2	Maintenance and service.....	9
2.3	Handling and maintenance.....	9
2.4	Disposal.....	9
3.	Input of welding parameters	10
3.1	SmartFuse-System.....	10
4.	Bluetooth functionality***	10
5.	Range of fitting dimensions	11
6.	Scope of delivery	11
7.	Technical data	12
7.1	Data recording Monomatic.....	14
7.2	Data recording Monomatic (Bluetooth).....	14
7.3	Data recording Monomatic Data USB and Monomatic Data USB (Bluetooth).....	14
7.4	Technical file according to ISO 12176-2.....	15
8.	Spare parts and accessories	17
9.	Controls and plugs	18
10.	Connection to the power supply	19
10.1	General.....	19
10.2	Extension cables.....	20
10.2.1	General.....	20
10.2.2	For Australia.....	20
10.3	Generator compatibility.....	21
10.3.1	Required generator rated output power.....	22
11.	Starting a welding process	23
11.1	Preparation.....	23
11.2	Switching the electrofusion control unit on.....	24
11.2.1	Monomatic (Bluetooth).....	24
11.2.2	Monomatic Data USB (Bluetooth).....	24
11.2.3	Other display messages.....	25
11.3	Pairing via Bluetooth*.....	26
11.3.1	Option „BT on“ active, „BT only“ inactive.....	26
11.3.2	Option „BT on“ active, „BT only“ active.....	27
11.3.3	Pairing via Bluetooth is finished.....	27
11.4	Main display / Displaying device data.....	29
11.5	Welding with SmartFuse.....	30

11.5.1	Connection of a fitting	30
11.5.2	Starting the welding procedure with SmartFuse.....	31
11.5.3	During the welding procedure	33
11.5.4	After the end of the welding procedure	33
12.	Function menu	35
12.1	Using the letter field to enter data	36
12.2	Job no.*	37
12.3	USB*	38
12.3.1	Transferring reports to a USB memory stick	39
12.3.2	Printing reports on a USB printer	42
12.4	Erase reports?*	45
12.5	Contrast (Display)	46
12.6	System config.....	47
12.6.1	Language	49
12.6.2	Inv. number	50
12.6.3	Set clock*	51
12.6.4	Memory control*	51
12.6.5	Daylight time*	52
12.6.6	Weldername*	52
12.6.7	Job no.*	53
12.6.8	South*	53
12.6.9	Cont. numbers*	54
12.6.10	Clamping.....	54
12.6.11	Code Lock.....	55
12.6.12	Code Sys.....	56
12.6.13	Code Del.*	57
12.6.14	Secure data*	58
12.6.15	BT on***	58
12.6.16	BT only***	59
13.	Troubleshooting and maintenance.....	59
13.1	Replacement of the welding terminals.....	59
14.	Error messages.....	60
14.1	General error messages	60
14.2	Error messages before and during the welding procedure.....	61
14.3	Error messages during USB data transfer*	62
14.3.1	General USB error messages	62
14.3.2	Error codes when using a USB memory stick*	63
14.3.3	Error codes when using a USB-printer*	64
14.3.4	Bluetooth error messages	64
15.	Declaration of conformity .....	65

1. Safety

The basic condition for safely handling and a hassle-free operation of the product is the knowledge about the fundamental safety guidelines and safety regulations. This instruction manual contains important information about the safe operation and handling of the electrofusion control unit. Everyone working with electrofusion control unit shall read and understand these instructions. These instructions shall be read and implemented in accordance with the relevant standards, workplace health and safety legislation, installation instructions, Codes of Practice and technical connection guideline in force in your country.

1.1 General safety guidelines for power tools

- a) Read and make sure you understand all safety guidelines and instructions. Failure to follow the safety guidelines and instructions can lead to electric shock, fire and/or serious injury.
- b) Keep these safety guidelines and instructions for future use.
- c) The term "power tool" used in the safety guidelines relates to mains-operated power tools (with cord) as well as battery-operated power tools (without cord).

2) Safety in the work area

- a) Keep your work area clean and well lit. Working in cluttered or dark areas can easily lead to accidents. Prevent the electrofusion control unit from unintentional movement or dropping.
- b) Do not work with the electrofusion control unit **in potentially explosive areas** in which flammable liquids, gases or dust are present. Power tools can produce sparks, which can ignite dust or fumes.
- c) Keep children and bystanders at distance while operating a power tool. Distractions can cause you to lose control over the electrofusion control unit. Do not allow other people touch the electrofusion control unit or cables and keep them away from your working place. Run cables neatly to avoid trip accidents. It is preferable to elevate cables on cable stands.

3) Electrical safety

- a) The plug of the electrofusion control unit must fit in the outlet. Never modify the plug in any way. Do not use any adapters in combination with earthed/grounded electrofusion control units. Unmodified plugs and matching outlets will reduce the risk of electric shock.
- b) Avoid physical contact with earthed/grounded surfaces or objects such as pipes, radiators, stoves and refrigerators whilst operating power tools. There is an increased risk of electric shock if your body is earthed/grounded.
- c) Keep electrofusion control units clear of rain and wetness. Water entering a electrofusion control unit will increase the risk of an electric shock.
- d) Do not misuse the cord of the electrofusion control unit for carrying it, hanging it up or pulling the plug out of the socket. Keep the cord away from heat, oil and sharp edges. Damaged or bent cords increase the risk of an electric shock.
- e) Do not carry the electrofusion control unit with the finger on the power switch. Pull out the plug when you do not use the electrofusion control unit or when changing the adapters and attachments.
- f) When operating an electrofusion control unit outdoors, use an extension cord suitable and approved for outdoor use. Usage of a cord suitable for outdoor use reduces the risk of an electric shock.
- g) **Always** use a residual current-operated protective device (RCD). Using an RCD reduces the risk of an electric shock.

4) Personal safety

- a) Stay alert! Watch what you are doing and use common sense when operating an electrofusion control unit. Do not use an electrofusion control unit while being tired or under the influence of drugs, alcohol or medication. One moment of inattention while operating an electrofusion control unit can cause serious personal injury.
- b) Use personal protective equipment and always wear eye protection. The use of protective equipment such as a dust mask, non-skid safety shoes, a hard hat or hearing protection, depending on the electric tool and its use will reduce personal injuries.
- c) Prevent unintentional starting of the device. Make sure that the electrofusion control unit is switched off before connecting it to the mains and/or battery or before picking it up/carrying it. Carrying the electrofusion control unit with a finger on the switch or energising electrofusion control units that are switched on can cause injuries and accidents.

5) Power tool usage and care

- a) Do not overload the electrofusion control unit! Use the appropriate electrofusion control unit for your application. When using an appropriate power tool you can work better and more safely in its range of capacity.
- b) Do not use an electrofusion control unit if the switch is broken. An electrofusion control unit, which cannot be turned on or off, is dangerous and must be repaired.
- c) Keep and store electrofusion control units away from children. Do not let people, who are not familiar with the electrofusion control unit or have not read and understood the instruction manuals, use it. Electrofusion control units are dangerous if being used by inexperienced users.
- d) Maintain electrofusion control units with care. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the electrofusion control unit's operation. If damaged, have the electrofusion control unit repaired before use. Many accidents are caused by poorly maintained electrofusion control units.
- e) Keep your electrofusion control units clean. Follow the servicing instructions and the instructions for changing the tools. Keep oil and grease away from the handles.
- f) Use the electrofusion control unit, accessories etc. in accordance with these instructions. Take the working conditions and the work to be performed into account. The use of the electrofusion control unit for applications differing from the application scope could result in a hazardous situation.

6) Service

- a) Have your electrofusion control unit repaired only by a qualified technician with genuine spare parts. This ensures that the safety of the electrofusion control unit is maintained.

1.2 Specific safety guidelines for the electrofusion control unit

1) Electrical safety

- a) The use of a residual current-operated protective device (RCD) is mandatory when working at outdoor construction sites. Note all directives and technical connection regulations in force in your country. It can be mandatory to always use a residual current-operated protective device (RCD).
- b) According to national and international guidelines, the use of > 230 V AC or higher (or > 110 V AC or higher) in trenches and confined spaces is only permitted if additional security measures are taken. Each electrical device operated in such an environment has to be powered by its own safety isolating transformer or its own insulation protective device.
- c) Only use accessories, particularly extension cords and generators, that are specified/recommended in this instruction manual. The use of any other accessories can damage the electrofusion control unit and increases your risk of injury.

- d) Before each use, the user must visually inspect that the electrofusion control unit, its cables and accessories as well as its electrical supply cord to ensure that all parts are free from damage correctly installed. Damaged protection facilities and device parts must be repaired or replaced by an authorized service agent.
- e) In accordance with the workplace health and safety legislation in force in your country for connection and usage of electric devices you must ensure that the electrofusion control unit, any extension cords and RCDs are regularly inspected (tested and tagged) by a licensed electrician or other competent person.
- f) It is very important that there is a Protective Earthing (PE) conductor which is continuous (i.e. <math><0.5\text{ Ohms}</math>) from the earth terminal of the generator to the earth terminal of the plug on the flexible supply cord of the electrofusion control unit. If the protective earthing conductor is interrupted or becomes higher in resistance, there is a risk of electric shock.

7) Personal safety

- a) Pipes and other workpieces must be firmly clamped or fixed. Poorly clamped or fixed workpieces may hurt you or affect your safe foothold.
- b) If the electrofusion control unit is used on a generator, the generator shall be grounded. Otherwise there is a risk of an electric shock.
- c) The electrofusion control unit shall only be used on a power circuit with a protective earthing conductor. Otherwise there is a risk of an electric shock.



This symbol indicates a general advice.

These advices describe recommended courses of action to enable the user to perform steps quicker and safer. The symbol can also underline certain required precondition or mean that the user must follow certain mandatory steps.



Read the provided documentation!

Read this instruction manual and the relevant safety guidelines carefully before turning on the electrofusion control unit!

2. Introduction



Different variants of the electrofusion control unit

This instruction manual describes several different variants of the electrofusion control unit. These variants differ in the range of available functions and in the number of menu entries. The differences are pointed out where necessary. Please check which variant you have.

2.1 Scope of application

The electrofusion control units of type Monomatic (Bluetooth) and Monomatic Data USB (Bluetooth) are solely meant for the welding of thermoplastic pipes (e.g. made of PE-HD, PE80, PE100 or PP) when used with electrofusion fittings that have an input voltage of less than 48 V. These devices are conforming to the standards DVS 2208-1 and ISO 12176-2, of which the applicable standards for the electrofusion fittings to be used are derived from.

The electrofusion control units of type Monomatic (Bluetooth) and Monomatic Data USB (Bluetooth) feature a built-in Bluetooth module for the communication with the "ElectroFusion Studio" app.

It is not allowed to use the electrofusion control unit for any application not covered by the above stated terms.



Intended use

It is not allowed to use the electrofusion control unit for any application not covered by the above stated terms. Modifying the electrofusion control unit without consulting the manufacturer is forbidden and shall be considered as improper use.

The manufacturer is not liable for the use of the electrofusion control unit outside of the intended use! When in doubt always consult your supplier or the manufacturer.

2.2 Maintenance and service

Should the electrofusion control unit fail despite the great care taken in manufacturing and testing it, the necessary repairs should only be carried out by an after-sales service centre authorised by the manufacturer. Please note that the product is a technically demanding machine for field application. In accordance to the applicable standards like DVS 2208-1, BGV A3, ISO 12176-2 and most national and international standards, these machines are subject to a periodical maintenance. The maintenance interval is 12 months, with heavy use shorter intervals are recommended.

During maintenance, the electrofusion control unit will be upgraded to the current technical standard of our devices and you get a 3-month guarantee on function for the maintained electrofusion control unit.

The maintenance and the related checks are important for you safety and the continuous working reliability of the electrofusion control unit. Therefore, the maintenance and all necessary repairs, have to be carried out by the manufacturer or an authorised service point.

For further information about our after-sales service centres please contact:

PF-Schweißtechnologie GmbH
Karl-Bröger-Str.10
DE-36304 Alsfeld
Germany

Tel.: +49-6631-9652-0
Fax: +49-6631-9652-52
E-Mail: info@pfs-gmbh.com
Web: www.pfs-gmbh.com

In all correspondence, please provide the serial number (S/N) as shown on the type plate of the tool.

2.3 Handling and maintenance

To achieve an optimum work results the tool has to be handled with care and maintained frequently. Pollution by sand and dirt has to be avoided or, if necessary, removed with a soft cloth or a Q-tip.

2.4 Disposal



For EU countries only: Do not dispose of electric devices in the household waste. According to the European directive 2002/96/EC for Waste Electrical and Electronic Equipment (WEEE) and its implementation into national legislation, electric devices which are no longer serviceable/usable must be collected separately and be recycled in an environment-friendly manner.

3. Input of welding parameters

The electrofusion control units of type Monomatic, Monomatic (Bluetooth), Monomatic Data USB and Monomatic Data USB (Bluetooth) provide the following means for entering the welding parameters:

3.1 SmartFuse-System



By reading out the reference resistor in one of the connector pins of the SmartFuse-fitting the control unit automatically determines the welding parameters for the fitting.

4. Bluetooth functionality***

The electrofusion control units of type Monomatic (Bluetooth) and Monomatic Data USB (Bluetooth) feature a built-in Bluetooth LE module. That makes it possible to control and record the welding procedure with the PFS app "ElectroFusion Studio". The app for smartphones and tablets is available for Android in the Google Play Store and for iOS in the Apple App Store. When using Bluetooth, the electrofusion control unit can only be used together with this app.



Attention!

To be able to use the app with the electrofusion control unit it is mandatory to have a registered account. Please ask your distributor.

***) Only with electrofusion control units that have Bluetooth functionality.

5. Range of fitting dimensions

The range of fitting dimensions for which an electrofusion control unit can be used depends essentially on the power consumption of the used fittings. Since the power consumption of the fittings is different for different fitting manufacturers, it is not possible to provide a general rule which covers all the possible fitting dimensions. When in doubt, each fitting size has to be checked separately. For electrofusion control units of type Monomatic, Monomatic (Bluetooth), Monomatic Data USB and Monomatic Data USB (Bluetooth), when all welding work is performed successively, such that the control unit has pauses in welding that correspond to the preparation time of the next fitting, the following rule applies:

Welding time	Requirements
20 s to 600 s	Usable without restrictions.
750 s to 900 s	Longer cool-down times must be provided for because otherwise the device might show the "Device too hot" error message. In this case, it is necessary to let the electrofusion control unit cool down before putting it to use again.
>900 s	Only couplers that have a welding time of 900 s or below can be welded.



Attention!
For welding of couplers in with a welding time of 900 s a stable and continuous supply voltage of 230 V is mandatory. When using a generator, it must be set to a no load voltage of between 240 V and 260 V.

The electrofusion control units of type Monomatic, Monomatic (Bluetooth), Monomatic Data USB and Monomatic Data USB (Bluetooth) can only be used together with SmartFuse-capable fittings and couplers.

Before processing fittings in this dimension range, you have to check that the welding current demand of the fitting does not continuously exceed the output current of the device and that the maximum output current is not exceeded.

The above rule assumes an ambient temperature of 20 °C.

6. Scope of delivery

	Monomatic / Monomatic (Bluetooth)	Enclosed
1 ×	Instruction manual	EN001
1 ×	Adapter 4.0/4.7 mm (optional)	
1 ×	Transport box	1_2800_005

	Monomatic Data USB / Monomatic Data USB (Bluetooth)	Enclosed
1 ×	Instruction manual	EN001
1 ×	USB memory stick	5_5001_512
1 ×	Adapter 4.0/4.7 mm (optional)	
1 ×	Accessory bag	1_2800_002
1 ×	Transport box	1_2800_005

A Flightcase is available as an alternative to the wooden box.

7. Technical data

Monomatic / Monomatic (Bluetooth) Monomatic Data USB / Monomatic Data USB (Bluetooth)				
General				
Output voltage	[V]	40 AC		
Data recording		Monomatic: No Monomatic (Bluetooth): No Monomatic Data USB: Yes Monomatic Data USB (Bluetooth): Yes		
Power (60 % ON time) according to ISO 12176-2		2050 W (55.9 A)		
Operating temperature range	[°C]	-10 to +50		
International protection		IP54		
Appliance class		1		
Conformity		CE		
ISO 12176-2 Class - classification Monomatic Monomatic (Bluetooth)		P ₂ 3 U S ₁ F A M		
ISO 12176-2 Class - classification Monomatic Data USB Monomatic Data USB (Bluetooth)		P ₂ 3 U S ₁ F A D M		
Input of welding parameters				
	Ye s	No	Opt.	
Barcode with reading pen (scanner optional)	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	
SmartFuse	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
Manual input of the barcode digits.	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	
Manual input of welding parameters	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	U_{OUT}: 8 to 48 V t_{WELD}: 0 to 9999 s
Manual input of welding parameters	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	U_{OUT}: 40 V (preset) t_{WELD}: 0 to 9999 s

Input/Mains		230 V devices	110 V devices
Nominal voltage (tolerance)	[V]	230 AC (190 to 300)	110 AC (90 to 150)
Nominal frequency (tolerance)	[Hz]	50/60 (40 to 70)	50/60 (40 to 70)
Power factor cos ρ		0.6 to 0.9 (phase-angle control)	0.6 to 0.9 (phase-angle control)
Nominal current	[A]	16	35
Power consumption	[VA]	3680	3680
Length of cord	[m]	4.5	On request
Plug type		Euro Schuko plug	On request
Output			
Output voltage	[V]	40 AC	
Output current (max.)		110	
Output current ($t \rightarrow \infty$)	[A]	30	
Output current (min.)	[A]	2	
Energy adjustment		None	
Welding cable length	[m]	5, other lengths on request	
Welding cable mounting		Fixed	
Welding terminals	[mm]	Optional 4.0, 4.7 or universal terminals for 4.0 und 4.7	
Monitoring functions			
Input		Voltage, current, frequency	
Output		Voltage, current, resistance, contact, short circuit	
Other		System, working temperature, service	
Error messages		Plain text, acoustic signal	
Casing/Display			
Material		Steel plate with plastic casing	
Display		4x20 characters, alphanumeric, background lighting	
Dimensions, weights and packaging			
Product dimensions L x W x H	[mm]	450 x 325 x 380	
Product weight (incl. welding cable)	[kg]	18*	
Product weight (excl. welding cable)	[kg]	16*	
Packaging dimensions L x W x H	[mm]	470 x 440 x 380	
Packaging material		Plastic*	
Packaging type		Box*	
Packaging weight	[kg]	4	
Transport weight	[kg]	22	

The given technical information is valid for the standard setup of the electrofusion control unit. Depending on the ordered setup there may be variations.

7.1 Data recording Monomatic

The electrofusion control units of type Monomatic do not generate reports.

7.2 Data recording Monomatic (Bluetooth)

When using the PFS app and the connection via Bluetooth, the electrofusion control units of type Monomatic (Bluetooth) transfer reports to the connected smartphone or tablet. An internal memory is not available in the electrofusion control unit.

7.3 Data recording Monomatic Data USB and Monomatic Data USB (Bluetooth)

The electrofusion control units of type Tiny Data M(F) USB (Bluetooth) provide data recording for approx. 500 welding cycles.

Monomatic Data USB		
Monomatic Data USB (Bluetooth)		
Data recording		
Number of reports		Approx. 500
Interface		USB (USB memory stick, USB printer)
Data format		PDF, CSV
Recorded data		
General data		Time, date, report number, ambient temperature
Fusion data		Voltage, current, energy, nominal and actual welding time, mode, resistance, error messages with 10 voltage and current values
Device data		Serial number, inventory number, date of last service, working hours, system configuration
Additional functions		
Output options		Whole memory
Job code input/selection		Manual, internal list of job numbers for selection

The given technical information is valid for the standard setup of the electrofusion control unit. Depending on the ordered setup there may be variations.

7.4 Technical file according to ISO 12176-2

Monomatic Monomatic (Bluetooth) Monomatic Data USB Monomatic Data USB (Bluetooth)		
Classification Monomatic / Monomatic (Bluetooth)		
Device type		Monomatic Monomatic (Bluetooth)
Classification		P ₂ 3 U S ₁ F A M
Classification Monomatic Data USB / Monomatic Data USB (Bluetooth)		
Device type		Monomatic Data USB Monomatic Data USB (Bluetooth)
Classification		P ₂ 3 U S ₁ F A D M
Simulation curved at 24 V output voltage		
<p>Tek Stopped 132 Acqs 06 Dec 12 12:23:20 Buttons</p> <p>U_{out}</p> <p>RMS(C2) 24.05V</p> <p>Ch2 20.0V M 4.0ms 50.0KS/s 20.0us/pt A Ch2 20.8V</p>		

Duty cycle according to ISO 12176-2 at 30 %, 60 % and 100 %, Test time t = 60 minutes

Test time 60 min	Output power at $U_{OUT} = 36\text{ V}$	Output power at $U_{OUT} = 40\text{ V}$	Output current I_{OUT}
30 %	2700 W	3000 W	74.1 A
60 %	2050 W	2250 W	55.9 A
100 %	1600 W	1800 W	44.7 A

Additional Information



Soft Start	At least 3 seconds (ramp)
Ambient temperature compensation	No
Fitting temperature compensation	No
Data recording Monomatic Monomatic (Bluetooth)	No
Data recording Monomatic Data USB Monomatic Data USB (Bluetooth)	Yes
Bluetooth module Monomatic Monomatic Data USB	No
Bluetooth module Monomatic (Bluetooth) Monomatic Data USB (Bluetooth)	Bluetooth LE

The given technical information is valid for the standard setup of the electrofusion control unit. Depending on the ordered setup there may be variations.

8. Spare parts and accessories

Description	Code
Welding Terminal 4.7mm, standard	1_0200_001
Welding Terminal 4.0mm, standard	1_0200_003
Welding terminal 4.7mm, Smart/Fuse (with detection tip)	2_0200_003
Welding terminal 4.0mm, Smart/Fuse (with detection tip)	2_0200_004
Universal terminal for 4.0 and 4.7 mm SmartFuse (with detection tip)	2_0200_051
Universal terminal for 4.0 and 4.7 mm, standard	2_0200_052
PVC-cap, red	1_0410_004
PVC-cap, black	1_0410_003
Adapter 4.7 to 4.7 angular	2_0300_009
Adapter 4.7 to 4.0 angular	2_0300_001
Adapter 4.0 to 4.7 angular	2_0300_004
Adapter 4.0 to 4.0 angular	2_0300_011
Adapter SmartFuse 4.7 to 4.7 angled	2_0200_005
Adapter SmartFuse 4.7 to 4.0 angled	2_0200_006
Adapter SmartFuse 4.0 to 4.7 angled	2_0200_007
Adapter 4.0 to 4.7 straight	2_0300_010
Adapter 4.7 to 4.0 straight	2_0300_017

9. Controls and plugs

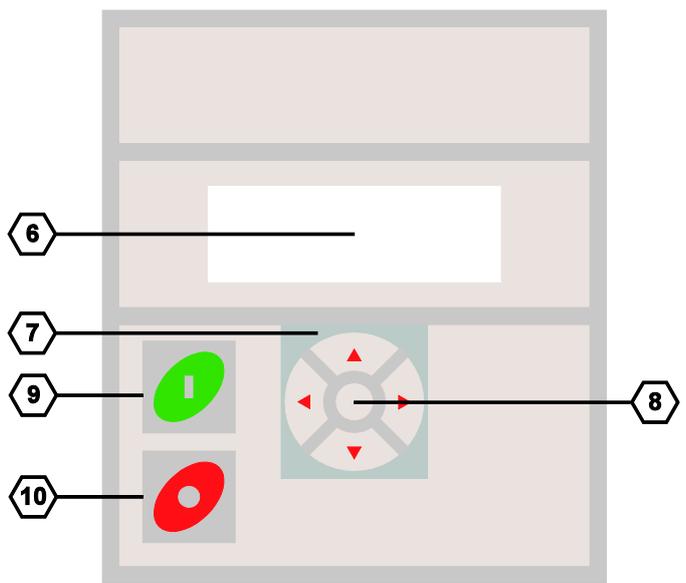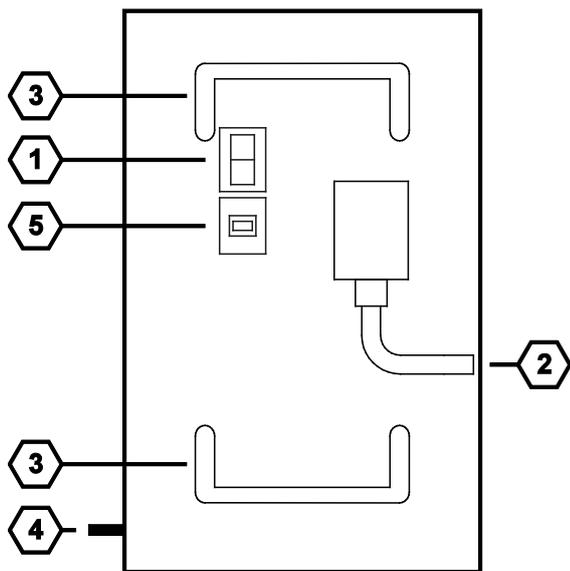

- 1 ON-OFF-switch
- 2 Welding cable
- 3 Cable holder and carrying handle
- 4 Mains supply cable
- 5 USB interface
only: Monomatic Data USB
and Monomatic Data USB (BT)

- 6 Display
- 7 Arrow keys ▲ ▼ ◀ ▶
- 8 Enter button
- 9 Green start button
- 10 Red stop button

10. Connection to the power supply

10.1 General



Attention!

GERMANY: The conditions for connecting the electrofusion control unit in this instruction manual, the technical connection regulations of the local power supply company, the VDE regulations, the regulations for accident prevention as well as other DIN/CEN regulations in force must always be observed.

OTHER COUNTRIES: It is mandatory to observe the connection regulations for the electrofusion control unit in this instruction manual as well as all international and national health and safety regulations and the respective technical connection regulations in force.

Electrofusion control units may only be used by trained and, according to national and international standards, certified personnel.

The user must supervise and observe the electrofusion control unit during the whole welding procedure.

The electrofusion control unit must only be operated within the following operation ranges:

	230 V devices	110 V devices
Input voltage:	190 V to 300 V (AC)	90 V to 150 V (AC)
Input Frequency:	50/60 Hz (40 to 70 Hz)	50/60 Hz (40 to 70 Hz)
Ambient temperature:	-10 °C to +50 °C	-10 °C to +50 °C
Input current	16 A	35 A
Max. input current	19 A	38 A
Input power	3680 VA	3680 VA
Max. input power	4400 VA	4400 VA
Minimum Fuse/ Circuit breaker rating	16 A (slow)	40 A (slow)



Attention!

- Operation of the electrofusion control unit is only allowed if a properly dimensioned and intact RCD is used. The information for proper fuse protection in the circuit are shown in the table above.
- The electrofusion control unit's mains supply cord as well as any extension cords must be fully unwound prior to usage.

10.2 Extension cables



Attention!

- The extension cords must provide a protective earthing contact.
- It is forbidden to extend the welding cable.
- **Always observe all international and national legislation and guidelines for extending mains supply cords.**

10.2.1 General

The mains supply cord shall only be extended in accordance with the following specifications.

Cable length	Cross Section (230 V)	Cross Section (110 V)
Up to 20 m	3 x 1.5 mm ²	3 x 4 mm ²
20-50 m	3 x 2.5 mm ²	3 x 4 mm ²
50-100 m	3 x 4 mm ²	-

10.2.2 For Australia

The mains supply cord must only be extended using approved extension cords. These can be obtained on request from your local distributor of electrofusion control boxes made by PF-Schweißtechnologie GmbH.



Attention!

- **For electrofusion control boxes used in Australia only extension cords acknowledged and approved by PF-Schweißtechnologie GmbH, a local distributor or an official PF service station shall be used.**
- **Using a non-approved extension cord is a health safety risk.**
- **Using a non-approved extension cord voids the manufacturer's warranty on the unit.**

10.3 Generator compatibility



Important notes for the usage together with generators!

- **AUSTRALIA:** Ensure that the generator is regularly inspected, tested and tagged by a licensed electrician or other competent person in accordance with workplace health and safety legislation and national Standards.
- **The generator must be grounded!**
- **The outlet which the electrofusion control unit is used together with must have a protective earthing conductor!**
- **It is very important that there is a Protective Earthing (PE) conductor which is continuous (i.e. <math><0.5\text{ Ohms}</math>) from the earth terminal of the generator to the earth terminal of the plug on the flexible supply cord of the electrofusion control unit. If the protective earthing conductor is interrupted or becomes higher in resistance, there is a risk of electric shock. For this reason, always ensure that only extension cords of the approved type are used. Ensure that the electrofusion control unit, all accessories and extension cords are regularly inspected, tested and tagged by a licensed electrician or other competent person.**
- **First start the generator, then plug in the electrofusion control unit.**
- No other machine or device must be connected to the generator.
- 400 V devices: The open circuit voltage should be set between 415 V and 430 V.
- Unplug the mains supply cable of the electrofusion control unit before turning the generator off.
- The usable generator power will decrease by 10 % per 1000 m of height above sea level.
- **Check the fuel level before starting the welding process.**
- **The instruction manual of the generator as well as its operating instructions are part of this instruction manual. Always read them carefully!**

The electrofusion control units of type Monomatic, Monomatic (Bluetooth), Monomatic Data USB and Monomatic Data USB (Bluetooth) provide the following features to increase the generator suitability:

- High tolerance for the input voltage
 - 190 V to 300 V at 230 V nominal
 - 90 V to 150 V at 110 V nominal
- High tolerance for the input frequency
 - 40 Hz to 70 Hz
- Display of current input voltage and frequency.
- Soft-Start for limitation of the generator load.

Despite these characteristics, the used generators must meet the following requirements and recommendations, in order to avoid damage to the electrofusion control unit. This ensures that the internal monitoring functions of the control unit do not interrupt the welding process:

- Suitable for phase-angle control
- 230 V:
 - No-load voltage adjustable between 240 V and 260 V
 - Output current of 18 A on one phase
- 110 V:
 - No-load voltage adjustable to 120 V – 130 V
 - Output current of 36 A on one phase
- Stable output voltage and engine RPM even with rapidly changing load
- Synchronous generators with mechanical RPM control preferred
- Voltage peaks must not exceed 800 V

10.3.1 Required generator rated output power



Attention!

It is not possible to make a statement for the necessary generator output power in each individual case, because every fitting manufacturer has different specifications.

The information in the following table below is to be used only as a guide as it can differ from your actual requirements.

The usable generator power will decrease by 10 % per 1000 m of height above sea level.

For an individual recommendation you can download our App „PFS Barcode Decoder“. With this app you can scan a fitting barcode and get detailed information about the fitting and a recommendation for the necessary generator output power.

Our App „PFS Barcode Decoder“ is available for Android in the Google Play Store as well as for iOS in the iTunes App Store.

Fitting diameter	Output Power
20-160 mm	3.2 kW
180-500 mm	4.5 kW (mechanically controlled) 5 kW (electronically controlled)
> 500 mm	6.5 kW (mechanically controlled) 7.5 kW (electronically controlled)

For generators with a poor control response or for generators with a bad tension stability, the guaranteed output power must be 3 to 3.5 times of the load to ensure a trouble free operation. The suitability of electronically controlled generators must be tested before usage due to the fact that the rotational speed of some generators tend to fluctuate, which results in extreme voltage peaks. Furthermore unexpected shutdown of the generator may occur.

11. Starting a welding process

The electrofusion control units Monomatic, Monomatic (Bluetooth), Monomatic Data USB and Monomatic Data USB (Bluetooth) only offer SmartFuse as a means for input of welding parameters.



Attention!

- The generator must be grounded!
- If the electrofusion control unit is used on a generator which is not grounded or on mains without protective earthing conductor there is a risk of an electric shock.

11.1 Preparation

Before starting up the following steps have to be performed in the given order:

Step	Action
1	Check the electrofusion control unit, cables and adapters optically and replace them in case of defects or damage.
2	Fully unwind the power supply cable and the welding cable.
3	Connect the detachable welding cable to the control unit.
4	Switch off the ON-OFF-switch of the electrofusion control unit.
5	Start the generator before plugging in the electrofusion control unit. Wait until the generator output voltage has stabilized.
6	Plug in the power cord of the electrofusion control unit.

11.2 Switching the electrofusion control unit on

11.2.1 Monomatic (Bluetooth)

Step	Action
1	Switch the ON-OFF-switch to "ON" position.
1.1	<p>The electrofusion control unit signals its readiness by two bleeps. The background lighting of the display turns on automatically. The display shows the following message for approx. 7 seconds:</p> <div style="border: 2px solid black; padding: 10px; width: fit-content; margin: 10px auto;"> <p style="text-align: center;">Monomatic BT 2.40H5 0 Workings hours</p> </div> <p style="text-align: right; margin-right: 20px;">Display after switching on</p> <p>Row 1 shows the device type. BT will only appear if it is an electrofusion control unit with Bluetooth capability***.</p> <p>Row 2 shows the software version.</p> <p>Row 3 shows the total amount of working hours (summed up welding times).</p>

***) Only with electrofusion control units that have Bluetooth functionality.

11.2.2 Monomatic Data USB (Bluetooth)

Step	Action
1	Switch the ON-OFF-switch to "ON" position.
1.1	<p>The electrofusion control unit signals its readiness by two bleeps. The background lighting of the display turns on automatically. The display shows the following message for approx. 7 seconds:</p> <div style="border: 2px solid black; padding: 10px; width: fit-content; margin: 10px auto;"> <p style="text-align: center;">Monomatic Data USB BT 2.10M5 0 Workings hours 500 Reports free</p> </div> <p style="text-align: right; margin-right: 20px;">Display after switching on</p> <p>Row 1 shows the device type.</p> <p>Row 2 shows the software version. BT will only appear if it is an electrofusion control unit with Bluetooth capability***.</p> <p>Row 3 shows the total amount of working hours (summed up welding times).</p> <p>Row 4 shows the number of free reports in the memory.</p>

***) Only with electrofusion control units that have Bluetooth functionality.

11.2.3 Other display messages

After the startup display is shown, other messages might be displayed before the main display is shown.

11.2.3.1 System config. at last welding process

If the system configuration is changed before the next restart of the electrofusion control unit, a message in the display is shown which indicates, that the system configuration has been changed and what was changed. This is also stored in a report.

- This message is acknowledged by pressing the red stop button.

11.2.3.2 Error occurred

If an error during or before the last welding has occurred (for example resistor error), a special message will appear in the display as a reminder.

- This message is acknowledged by pressing the red stop button.

1	Example
1.1	The following example is meant to show how the device will indicate that an error has occurred before switching the electrofusion control unit off. <div data-bbox="272 853 735 1061" style="border: 2px solid black; padding: 10px; display: inline-block;"><p>Resistance error at last welding proc ess</p></div> Display after switching on



Attention!

These messages do not show current errors/problems. They are only meant to remind the user that an error/ problem occurred before the electrofusion control unit was switched off the last time!

11.2.3.3 Service

This message is displayed as soon as the service interval has passed. This can happen, if the set time for the service interval (e. g. 12 months) has passed, or, for electrofusion control units with no data recording, after 200 operating hours.

- This message is acknowledged by pressing the red stop button.



Attention!

It is recommended to send the electrofusion control unit in for service as soon as this message appears. The display of this message is a recommendation or reminder to you, that the service interval of the electrofusion control unit is reached. The display of this message does not mean, that the electrofusion control unit cannot be used anymore before service.

By acknowledging with a press on the red stop button the electrofusion control unit switches back to the main display.

Step	Action
<p data-bbox="188 219 212 253">2</p> <p data-bbox="177 271 223 304">2.1</p> <p data-bbox="177 633 223 667">2.2</p>	<p data-bbox="268 219 528 253">Display after pairing</p> <p data-bbox="268 271 951 304">The electrofusion control unit shows the following display.</p> <div data-bbox="272 344 735 555" style="border: 2px solid black; padding: 5px; margin: 10px 0;"> <pre data-bbox="284 371 671 539">#10020981 ←Menu Waiting for App BT active</pre> </div> <p data-bbox="767 439 1182 472">Display after proceeding in the app</p> <p data-bbox="268 568 1430 629">Row 4 briefly shows the text "BT active". The electrofusion control unit indicates that it is operated by a mobile device.</p> <p data-bbox="268 640 1430 723">Now continue to operate the controller using the "ElectroFusion Studio" app on your mobile device. The electrofusion control unit shows the displays in accordance to the currently active step in the welding procedure.</p>

11.4 Main display / Displaying device data

When the main display is shown you can display device data of the electrofusion control unit by pressing and holding the ► button.

Step	Action
<p>1</p>	<p>Before connecting a fitting, the display shows the main display:</p> <div data-bbox="272 454 727 674" style="border: 2px solid black; padding: 5px; margin-bottom: 10px;"> <p>Connect SmartFuse Voltage: 230 V Frequency: 50 Hz No contact</p> </div> <p style="margin-left: 40px;">Main display* Monomatic (Bluetooth)</p> <p>Row 1 shows the message that a fitting must be connected. Row 2 shows the measured mains voltage. Row 3 shows the measured mains frequency. Row 4 shows the message, that no fitting is connected.</p> <div data-bbox="272 860 727 1079" style="border: 2px solid black; padding: 5px; margin-bottom: 10px;"> <p>Connect SmartFuse 50 Hz 230 V +25°C 31.05.2017 15.03 No contact</p> </div> <p style="margin-left: 40px;">Main display* Monomatic Data USB (Bluetooth)</p> <p>Row 1 shows the message that a fitting must be connected. Row 2 shows the measured mains frequency and the mains voltage. Row 3 shows the set date and time. Row 4 shows the message, that no fitting is connected.</p>
<p>2</p>	<p>Press and hold the right arrow button ► to display device data of the electrofusion control unit.</p> <div data-bbox="272 1357 727 1576" style="border: 2px solid black; padding: 5px; margin-bottom: 10px;"> <p>Monomatic Data USB 2.40M5 54 s 12345678 12345678</p> </div> <p style="margin-left: 40px;">Device data</p> <p>Row 1 shows the device type. Row 2 shows the software version as well as the total welding time in seconds. Row 3 shows the device number. The device number is preset and cannot be changed. Row 4 shows the inventory number. The inventory number can be set in the system configuration, At first the device number is used as inventory number.</p>
<p>3</p>	<p>Release the right arrow button to stop the display of the device data.</p>

*) Devices that have a built-in temperature sensor show the ambient temperature in the second row of the main display after the mains voltage. Additionally the ambient temperature will be shown in the welding report.

**) Only with electrofusion control units that have data recording capability.

11.5 Welding with SmartFuse



Attention!

The following description is based on the displays of an electrofusion control unit of type Monomatic Data USB (Bluetooth).

11.5.1 Connection of a fitting



Attention!

The contact surfaces of the welding terminals and the pins of the fitting must be clean. Dirty or coated terminals lead to overheating and scorching on the areas of contact inside the welding terminals.

The welding terminals must be replaced as soon as they develop a coating on the contact surfaces or a loss of contact force is noticeable.



Attention!

- **Pay attention to the installation instructions of the fitting, special instructions (ISO, CEN, DVGW, DVS), European and national directives as well as to the instructions of the manufacturers.**
- Dirty and/or damaged contacts in the terminals or on the fitting can be a reason for the SmartFuse system to determine wrong welding parameters.
- **After the welding parameters have been automatically determined it is imperative that you cross check the displayed parameters with the ones shown on the fitting to make sure, that the correct welding parameters are used.**

Step	Action
1	<p>Before connecting a fitting, the display shows the main display:</p> <p>Row 1 shows the message that a fitting must be connected.</p>
2 2.1	<p>A SmartFuse capable fitting is connected.</p> <p>To weld with the SmartFuse system the red terminal must be connected to the contact of the fitting that bears a red marking. After a fitting has been connected correctly in this manner, the electrofusion control unit begins to determine the welding parameters based on the built-in resistor in the contact of the fitting. During this procedure the display shows the following message:</p> <div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 10px 0;"> <p>SmartFuse measure 50 Hz 230 V +23°C 30.05.2017 11.50</p> </div> <p style="margin-left: 20px;">Determination of the welding parameters</p> <p>Row 1 shows that the SmartFuse resistor in the fitting is measured. Row 2 shows the measured mains frequency, the mains voltage and the ambient temperature. Row 3 shows the set date and time.</p>

Step	Action
3	<p>After the welding parameters have been determined, the electrofusion control unit shows the following information in the display:</p> <div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 10px 0;"> <pre> Start Nom. time: 30 s PLA 40 V +20°C </pre> </div> <p style="margin-left: 200px;">Display of the determined welding parameters</p> <p>Row 1 indicates that you have to press the green start button to start the welding process. Before continuing you are obliged to cross check if the welding time, manufacturer, diameter and type are compliant to the connected fitting. Row 2 shows the welding time. Row 3 shows the manufacturer, type and welding voltage of the fitting as well as the ambient temperature.</p> <p>It is imperative that the parameters displayed match the parameters written on the fitting by its manufacturer.</p>

11.5.2 Starting the welding procedure with SmartFuse

Step	Action
4	<p>Starting the welding procedure</p> <p>4.1 To start the welding procedure with the displayed parameters press the green start button.</p>
5 OPT	<p>OPTIONAL: Clamping</p> <p>5.1 OPT OPTIONAL: After pressing the green start button a display message reminds you of your duty to fix and clamp the pipes. If your electrofusion control unit has this option and you have activated it in the system configuration, the following message will appear in the display:</p> <div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 10px 0;"> <pre> Pipes clamped? Nom. time: 30 s PLA 40 V +23°C </pre> </div> <p style="margin-left: 200px;">Prompt for confirmation of performed pipe clamping</p> <p>Green start button By pressing the green start button you confirm that you have clamped the pipes according to the regulations. Red stop button By pressing the red stop button you confirm that you do not have clamped the pipes.</p> <p>The statement you make here will be logged in the welding report.</p>

Step	Action
<p>6</p> <p>6.1</p>	<p>Reminder</p> <p>After pressing the green start button a message will remind you of your duty to fix and prepare the pipes according to the general guidelines. If you have any doubt about the correct preparation, you can quit the procedure by actuating the red stop button. Otherwise, confirm that you prepared everything properly by pressing the green start button.</p> <div data-bbox="276 434 730 645" style="border: 2px solid black; padding: 10px; margin: 10px 0;"> <p>Is the pipe scraped and clamped?</p> </div> <p style="text-align: right;">Reminder</p>
<p>7</p> <p>7.1</p> <p>7.2</p>	<p>Measuring the fitting resistance</p> <p>The electrofusion control unit begins to measure the fitting resistance. Should the measured fitting resistance be out of the valid range, an error message will be shown on the display and the error will be indicated by a bleep. The bleep can be interrupted by pressing the red stop button.</p> <div data-bbox="276 887 730 1097" style="border: 2px solid black; padding: 10px; margin: 10px 0;"> <p>0.15< 0.05 <35.00 Nom. time: 30 s Resistance error</p> </div> <p style="text-align: right;">Display when a resistance error has occurred</p> <p>Row 1 shows lower and upper limit on the left and right and the measured resistance in the middle. Row 2 shows the nominal welding time. Row 3 shows the report number under which the error report is stored. Row 4 shows "Resistor Error"</p> <p>Unplug the welding cable from the fitting. Check that the contacts of the fitting and the welding terminals are clean. Should the fitting, after cleaning the contact surfaces, produce another resistor error then it could be defective. Use another fitting.</p>
<p>8</p> <p>8.1</p>	<p>No resistance error detected</p> <p>The electrofusion control unit begins the welding procedure automatically if no resistance error occurred.</p>
<div style="display: flex; align-items: center;">  <p>Attention! Do not touch the fitting or the contact surfaces during the welding process. Keep a minimum safe distance of 1 m to avoid the risk of injury by molten PE mass.</p> </div>	

11.5.3 During the welding procedure

Step	Action
9	During the welding procedure
9.1	<p>The display shows the actual and nominal welding time:</p> <div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 10px 0;"> <pre>Act. time: 1 s Nom. time: 30 s PLA 40 V</pre> </div> <p style="text-align: right;">Display during the welding procedure</p> <p>Row 1 shows the actual welding time, which is counted upwards. Row 2 shows the nominal welding time. Row 3 shows the specifications of the fitting. Row 4 shows possible error messages.</p>

11.5.4 After the end of the welding procedure

Step	Action
10	End of the welding procedure
10.1	<p>The welding process will stop automatically when the actual time reaches the nominal time. This will be indicated by two bleeps and the following message:</p> <div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 10px 0;"> <pre>Act. time: 30 s Nom. time: 30 s Report number 3 30.06.2014 11.50</pre> </div> <p style="text-align: right;">Display after the welding procedure</p> <p>Row 1 shows the actual welding time, which is counted upwards. Row 2 shows the nominal welding time. Row 3 shows the report number under which the weld is stored*. Row 4 shows date and time of the weld.</p>
11	After the end of the welding procedure
11.1	<p>After completion of the welding procedure, the welding terminals can be unplugged cautiously from the fitting. After that, the display of the device shows the startup message again.</p>



Attention!

- Do not forcefully remove the welding terminals from the fitting.
- Before transporting the electrofusion control unit, unplug the welding terminals from the fitting.
- Observe the cooling time, the processing instructions as well as the processing guidelines of the fitting manufacturer as well as those of the pipe manufacturer.

*) Only with electrofusion control units that have data recording capability.

Step	Action
<p data-bbox="172 219 228 275">12 OPT</p> <p data-bbox="172 297 228 353">12.1 OPT</p>	<p data-bbox="268 219 778 253">OPTIONAL: Display of weld-related data</p> <p data-bbox="268 297 1329 353">After completion of the welding procedure, the following information of the welding can be displayed by keeping the ▲-button on the keypad pressed.</p> <div data-bbox="276 398 730 611" style="border: 2px solid black; padding: 5px; margin: 10px 0;"> <p data-bbox="292 421 459 454">2.25 Ohm</p> <p data-bbox="292 465 379 499">40 V</p> <p data-bbox="292 510 483 544">10.596 kJ</p> <p data-bbox="435 555 563 589">- OK -</p> </div> <p data-bbox="762 488 1169 521">Display of the welding parameters</p> <p data-bbox="268 611 1153 745">Row 1 shows the measured resistance before welding in units of Ohm (Ω). Row 2 shows the nominal voltage in units of Volt (V). Row 3 shows welding energy in units of Kilojoule (kJ). Row 4 shows possible error messages.</p>
<p data-bbox="172 779 228 813">13</p> <p data-bbox="172 824 228 857">13.1</p>	<p data-bbox="268 779 539 813">Back to main display</p> <p data-bbox="268 824 1026 857">By pressing the enter button you can return to the main display.</p>

12. Function menu



Different variants of the electrofusion control unit

This instruction manual describes several different variants of the electrofusion control unit. These variants differ in the range of available functions and in the number of menu entries. The differences are pointed out where necessary. Please check which variant you have.

Step	Action
<p>1</p> <p>1.1</p>	<p>Displaying the function menu</p> <p>When the main display is shown, press the enter on the keypad. The function menu is displayed:</p> <div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 10px auto;"> <p>Connect Fitting +++++Job number+++++ Report number 3</p> </div> <p style="text-align: right;">Main display</p>
<p>2</p> <p>2.1.</p>	<p>The function menu</p> <p>After pressing the enter button the function menu will be displayed.</p> <div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 10px auto;"> <p>>Job no. USB Erase reports</p> </div> <p style="text-align: right;">Display of the function menu</p> <p>The menu contains a list of all available functions. The symbol > is the selection indicator that marks the entry that is selected or activated when the enter button is pressed.</p> <p>▲ ▼ These buttons move the selection indicator up and down. Enter button The enter button selects the function marked by the selection indicator >. Red stop button Abort and return to the main display</p>

The following table shows the available functions.

Function	Description	Page
Job no.	Entering a job number (commission number)*	37
USB	Data transfer to a USB memory stick or printout*	38
Erase reports	Erasing the reports per job number*	45
Contrast	Setting of the display contrast	46
System config.	System configuration options	47

*) Only with electrofusion control units that have data recording capability.

12.2 Job no.*

To show the currently active 40-digit job number and to change it, select the function "Job no." in the function menu. Now the currently set job number (commission number) is displayed. The last row of the display shows the number of reports that already have been stored under this job number. In this menu you can select a job number under which the following reports will be stored. Alternatively you can create a new job number with the help of a letter field.

Step	Action
<p>1</p> <p>1.1</p> <p>1.2</p>	<p>Displaying the job numbers</p> <p>Select the entry "Job no." in the function menu, using the ▲ - and ▼ -buttons.</p> <p>Then press the enter button to select the function.</p>
<p>2</p>	<p>The menu "Job no."</p> <div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 10px 0;"> <p>Job no.</p> <p>+++++Job number+++++</p> <p style="text-align: right;">2</p> </div> <p style="margin-left: 20px;">Setting the job number</p> <p>▲ ▼ Cycles through the already entered job numbers.</p> <p>Enter button Creates a new job number</p> <p>Green start button Sets the currently displayed job number active.</p> <p>Red stop button Abort and return to the main display.</p> <p>You have three ways of changing the job number (commission number) under which the following reports are stored.</p>
<p>2.1</p> <p>2.1</p> <p>2.1</p>	<p>OPTIONAL: Reading in a barcode that contains the job number (commission number).</p> <p>If for example you have a contract with a commission number available as barcode you can read this in as job number. The maximum length of the barcode may not exceed 40 digits (alphanumeric). Preferably, a barcode of type Code128, 2/5i or Code39 extended should be used.</p> <p>The prompt that follows the successful reading in of a barcode should be acknowledged by pressing the green start button to accept the barcode. It will then be copied to the internal list and set as currently active job number (commission number). Finish your selection by pressing the green start button.</p> <p>OPTIONAL: Selecting an already existing job number and activating it.</p> <p>You can browse through the list of already entered job numbers by pressing the ▲ and ▼ -buttons. To set the displayed job number to the active job number press the green start button.</p> <p>OPTIONAL: Entering a new job number with the help of the letter field</p> <p>Press the enter button to activate the letter field for input of the job number. Now you can, as described in the previous section, enter a new job number. The current job number is displayed. Now you can enter a new job number. Confirm your the input by pressing the green start button or cancel the function by pressing the red stop button.</p> <p>Your entry will then be copied to the internal list and set as active job number. Close the job number selection by pressing the green start button.</p>

*) Only with electrofusion control units that have data recording capability.

12.3 USB*

The menu item "USB" includes functions to transfer reports to a USB memory stick and to print reports to a directly connected printer.



Attention!

Before selecting the menu entry "USB" connect the desired terminal equipment, USB memory stick or printer, to the USB interface of the electrofusion control unit.

After selecting the menu entry "USB" the electrofusion control unit checks if a device is connected. If this is not the case, an error will be shown.

Function	Memory	Appearance in PDF
All (short)	Whole memory (all reports)	Tabulated
All (long)	Whole memory (all reports)	1 page per report
Job no. (short)	Per job number	Tabulated
Job no. (long)	Per job number	1 page per report

When transferring the reports to a USB memory stick two files are created: one PDF file and one file with the extension "log", which contains the reports in CSV format.

PDF-Format: The electrofusion control unit generates a PDF file on the USB memory stick, which contains the already formatted welding reports. The PDF file can be opened with Adobe Acrobat Reader (Version 3.0 or higher; www.adobe.com).

CSV-Format: This format contains the report data in a tabular format, in which the report data is stored in one row each. The data fields are separated by semicolons. This file type can be opened by standard spreadsheet or database applications. We highly recommend using the EXCEL macro stored on the supplied USB memory stick to transfer the data unadulterated to an EXCEL-spreadsheet. The macro is stored on the supplied USB memory stick in the folder </macro/de>. Also, read the manual for this macro, which is stored in the same folder. In addition, the content of the folder should be copied to a computer and the EXCEL macro should only be run from a local hard drive.

The CSV file can also be opened with the Datamatic software. To do so use the function "Open as text file" and select the appropriate file.

Location/file name: The electrofusion control unit generates a sub folder </PF> on the USB memory stick, in which the generated files are stored. The file names are generated by the electrofusion control unit according to the following syntax: <PFnnnnn.PDF> for PDF files and <PFnnnnn.log> for CVS-files. <nnnnn> stands for an incremental numbering, which ensures that already existing files are not overwritten.



Attention!

The USB memory stick is not a suitable medium for permanent storage of data. Backup your data regularly.

Transfer the reports to a PC or Notebook as soon as possible and erase the files on the USB memory stick. The number of files per folder on the USB memory stick is limited to 30 per file format. If more than 30 files are created, the electrofusion control unit will create a new folder on the USB memory stick with the name PF and a progressive number.

*) Only with electrofusion control units that have data recording capability.

12.3.1 Transferring reports to a USB memory stick



Attention!

The functionality of the USB data transfer can only be guaranteed when using the supplied USB memory stick.

If you use a different USB memory stick, it should match the following specifications to increase the probability of being compatible:

Capacity: up to 2 resp. 4 GB

File system: FAT

Step	Action								
<p>1</p> <p>1.1</p> <p>1.2</p> <p>1.3</p>	<p>Selecting the entry "USB"</p> <p>Insert the supplied USB memory stick into the USB interface of the electrofusion control unit. If you want to use a different USB memory stick, make sure it is not write-protected.</p> <p>Select the entry "USB" in the function menu, using the ▲ - and ▼ -buttons.</p> <p>Then press the enter button to select the function. The message "Check USB" is displayed for a short time. The terminal device which is connected to the USB interface is now tested. After that, a display with the available printing options is shown.</p>								
<p>2</p> <p>2.1</p>	<p>The menu "USB"</p> <div style="border: 2px solid black; padding: 10px; margin: 10px 0;"> <pre>>All (short) All (long) Job no. (short)</pre> </div> <p style="margin-left: 40px;">Display in the "USB" menu.</p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 15%; vertical-align: top;">▲ ▼</td> <td>Browses through the menu entries</td> </tr> <tr> <td>Enter button</td> <td>Selects the marked entry</td> </tr> <tr> <td>Green start button</td> <td>No function</td> </tr> <tr> <td>Red stop button</td> <td>Abort and return to the main display</td> </tr> </table> <p>2.1</p> <ul style="list-style-type: none"> • Make your selection here. You can choose if you want to print all reports or only those that are stored under a certain job number. Navigate to the desired entry by pressing the ▲ - and ▼ - buttons and confirm the selection by pressing the enter button to begin data transfer. • If you chose to transfer the reports per job number, select the respective job number with the arrow buttons ▲ - and ▼ and confirm your selection with the green start button. 	▲ ▼	Browses through the menu entries	Enter button	Selects the marked entry	Green start button	No function	Red stop button	Abort and return to the main display
▲ ▼	Browses through the menu entries								
Enter button	Selects the marked entry								
Green start button	No function								
Red stop button	Abort and return to the main display								

Step	Action
<p>3</p> <p>3.1</p>	<p>Beginning the data transmission</p> <p>Data transfer begins. During data transfer, the following message appears in the display. (The data shown here are but an example and are different depending on the conditions.)</p> <div data-bbox="272 369 724 577" style="border: 2px solid black; padding: 5px; margin: 10px 0;"> <p>PF / PF000006 .PDF 00010</p> </div> <p style="margin-left: 200px;">Display during data transfer</p> <p>Row 1 shows the name of the folder in which the reports are stored on the USB memory stick. Row 2 shows the file, in which the reports are written. Row 3 shows the number of transferred pages.</p>
<p>4</p> <p>4.1</p>	<p>End of data transmission when transmitting all reports</p> <p>After successful data transfer the following display will be shown, if you chose to transfer all reports. (In case you only want to transmit the reports for one job number please continue reading Step 6.)</p> <div data-bbox="272 922 724 1131" style="border: 2px solid black; padding: 5px; margin: 10px 0;"> <p>Erase ?</p> </div> <p style="margin-left: 200px;">Prompt for deletion after the data transfer</p>
<p>5 OPT</p> <p>5.1</p> <p>5.2</p> <p>5.3</p>	<p>OPTIONAL: Deletion of the transferred reports</p> <p>The prompt "Erase?", which is shown if all reports were transferred, makes it possible to delete all reports in the electrofusion control unit.</p> <p>If you want to erase the reports, press the enter button. A confirmation prompt "Are you sure?" will be displayed.</p> <p>If you confirm this prompt by pressing the green start button, the respective reports will be erased. The display will then show the main display.</p>
<p>5 OPT</p> <p>5.1</p>	<p>OPTIONAL: Leaving the transmitted reports in the device's memory</p> <p>If you do not want to delete the reports and leave them stored in the memory of the device, press the red stop button. The display will then show the main display.</p>
	<p>Attention!</p> <p>The prompt for deletion of the transferred reports only appears if "Secure data" is deactivated in the system configuration.</p>
	<p>Attention!</p> <p>The deletion can take up to a couple of minutes.</p> <p>To avoid possible errors in the memory management or loss of data, ensure that the electrofusion control unit is not cut off from power during deletion of the reports. This could lead to the destruction of the electronics!</p> <p>NEVER switch the electrofusion control unit off during the deletion of welding reports.</p>

Step	Action
<p>6</p> <p>6.1</p>	<p>End of data transmission when transmitting reports per job number</p> <p>After successful data transfer of the reports for one job number the following display will be shown:</p> <div data-bbox="272 338 727 555" style="border: 2px solid black; padding: 5px; margin: 10px 0;"> <pre>PF / OK PF000006.PDF</pre> </div> <p>Display after the transfer of the reports for one job number</p> <p>Row 1 shows the name of the folder in which the reports are stored on the USB memory stick, as well as the message "OK". Row 2 shows the file, in which the reports are written.</p> <p>You can return to the main display by pressing the red stop button. By pressing the green start button you are taken to the deletion prompt for the transmitted reports.</p> <div data-bbox="272 808 727 1025" style="border: 2px solid black; padding: 5px; margin: 10px 0;"> <pre>+++++Job number+++++ Erase ?</pre> </div> <p>Erase prompt for the reports of this job number.</p>
<p>7 OPT</p> <p>7.1</p> <p>7.2</p> <p>7.3</p>	<p>OPTIONAL: Deletion of the transferred reports</p> <p>The prompt "Erase ?" which is displayed together with the job number offers the possibility to delete the last transmitted reports from the memory of the electrofusion control unit.</p> <p>If you want to erase the reports, press the enter button. A confirmation prompt "Are you sure?" will be displayed.</p> <p>If you confirm this prompt by pressing the green start button, the respective reports will be erased. The display will then show the main display.</p>
<p>7 OPT</p> <p>7.1</p>	<p>OPTIONAL: Leaving the transmitted reports in the device's memory</p> <p>If you do not want to delete the reports and leave them stored in the memory of the device, press the red stop button. The display then shows again the selection of the job numbers.</p>



Attention!

The deletion can take up to a couple of minutes.

To avoid possible errors in the memory management or loss of data, ensure that the electrofusion control unit is not cut off from power during deletion of the reports. This could lead to the destruction of the electronics!

NEVER switch the electrofusion control unit off during the deletion of welding reports.

12.3.2 Printing reports on a USB printer



Attention!

The connection between electrofusion control unit and printer should be established before selecting the menu entry "USB".

The manufacturer does not guarantee that the electrofusion control unit will work with every USB-printer model. Depending on the manufacturer and type of the printer it is possible that no connection can be established.

Step	Action
<p>1</p> <p>1.1</p> <p>1.2</p> <p>1.3</p>	<p>Selecting the entry "USB"</p> <p>Connect the printer with the USB interface of the electrofusion control unit.</p> <p>Select the entry "USB" in the function menu, using the ▲- and ▼-buttons.</p> <p>Then press the enter button to select the function. The message "Check USB" is displayed for a short time. The terminal device which is connected to the USB interface is now tested. After that, a display with the available printing options is shown.</p>
<p>2</p>	<p>The menu "USB"</p> <div style="border: 2px solid black; padding: 5px; margin: 10px 0;"> <p>>All (short)</p> <p>All (long)</p> <p>Job no. (short)</p> </div> <p>▲ ▼</p> <p>Enter button</p> <p>Green start button</p> <p>Red stop button</p> <p>Display in the "USB" menu.</p> <p>Browses through the menu entries.</p> <p>Selects the marked entry.</p> <p>No function</p> <p>Abort and return to the main display</p>
<p>2.1</p>	<ul style="list-style-type: none"> • Make your selection here. You can choose if you want to print all reports or only those that are stored under a certain job number. Navigate to the desired entry by pressing the ▲- and ▼- buttons and confirm the selection by pressing the enter button to begin data transfer. • If you chose to transfer the reports per job number, select the respective job number with the arrow buttons ▲- and ▼ and confirm your selection with the green start button.
<p>3</p> <p>3.1</p>	<p>Beginning the data transmission</p> <p>Data transfer and printing starts. During data transfer, the following message appears in the display.</p> <div style="border: 2px solid black; padding: 5px; margin: 10px 0;"> <p>Data trasmission</p> </div> <p>Display during data transfer</p>

Step	Action
<p>4</p> <p>4.1</p>	<p>End of data transmission</p> <p>After the data transfer this display is shown.</p> <div data-bbox="269 338 724 546" style="border: 2px solid black; padding: 10px; margin: 10px 0;"> <p>System configuration</p> <p>.....</p> </div> <p>Prompt for the printout of the system configuration</p> <p>The electrofusion control unit prompts whether the current system configuration shall also be printed out. In this case continue reading step 6 OPT.</p> <p>If you press the green start button then the system configuration will be printed out. In this case continue reading step 5 OPT.</p> <p>If you press the red stop button, the system configuration will not be printed out.</p>
<p>5 OPT</p> <p>5.1</p> <p>5.2 OPT</p> <p>5.3 OPT</p>	<p>OPTIONAL: Without printing the system configuration</p> <p>If you do not want to print the current system configuration, press the red stop button. The following display is shown:</p> <div data-bbox="269 925 724 1133" style="border: 2px solid black; padding: 10px; margin: 10px 0;"> <p>Data transfer OK</p> </div> <p>Data transmission was successful.</p> <p>OPTIONAL: To return to the main display press the red stop when this display is shown.</p> <p>OPTIONAL: To be able to erase the recently printed reports press the green start button. The following display is shown:</p>
<p>6 OPT</p> <p>6.1 OPT</p> <p>6.2 OPT</p>	<p>OPTIONAL: Deletion of the transferred reports</p> <p>OPTIONAL: If you want to erase the reports, press the enter button. A confirmation prompt "Are you sure?" will be displayed. OPTIONAL: Confirm this prompt by pressing the green start button. The reports will be deleted and the electrofusion control unit again shows again the main display.</p> <div data-bbox="269 1538 724 1747" style="border: 2px solid black; padding: 10px; margin: 10px 0;"> <p>Erase ?</p> </div> <p>Prompt for deletion after the data transfer</p> <p>If you chose the job number printing you are offered the possibility to erase the reports that are stored under a single job number.</p> <p>OPTIONAL: Press the red stop button to leave the reports in the memory of the device. The electrofusion control unit will then show the main display again.</p>

**Attention!**

The prompt for deletion of the transferred reports only appears if "Secure data" is deactivated in the system configuration.

Step	Action
<p>7 OPT</p> <p>7.1</p> <p>7.2 OPT</p>	<p>OPTIONAL: With printing the system configuration</p> <p>If you want to print the current system configuration, press the green start button. The following display is shown:</p> <div data-bbox="272 521 727 730" style="border: 2px solid black; padding: 10px; margin: 10px 0;"> <p style="text-align: center;">Data transfer OK</p> </div> <p style="margin-left: 200px;">Data transmission was successful.</p> <p>OPTIONAL: After the data transmission the following display is shown:</p>
<p>8</p> <p>8.1 OPT</p> <p>8.2 OPT</p>	<p>OPTIONAL: Deletion of the transferred reports</p> <p>OPTIONAL: If you want to erase the reports, press the enter button. A confirmation prompt "Are you sure?" will be displayed. OPTIONAL: Confirm this prompt by pressing the green start button. The reports will be deleted and the electrofusion control unit again shows again the main display.</p> <div data-bbox="272 1072 727 1281" style="border: 2px solid black; padding: 10px; margin: 10px 0;"> <p style="text-align: center;">Erase ?</p> </div> <p style="margin-left: 200px;">Prompt for deletion after the data transfer</p> <p>If you chose the job number printing you are offered the possibility to erase the reports that are stored under a single job number.</p> <p>OPTIONAL: Press the red stop button to leave the reports in the memory of the device. The electrofusion control unit will then show the main display again.</p>

**Attention!**

The prompt for deletion of the transferred reports only appears if "Secure data" is deactivated in the system configuration.

**Attention!**

The deletion can take up to a couple of minutes.

To avoid possible errors in the memory management or loss of data, ensure that the electrofusion control unit is not cut off from power during deletion of the reports. This could lead to the destruction of the electronics!

NEVER switch the electrofusion control unit off during the deletion of welding reports.

12.4 Erase reports?*

This function enables you to delete the reports that are stored in the electrofusion control unit. The reports can be deleted per job number. You can press the red stop button at any time. This will take you back to the main display.

	<p>Attention!</p> <p>You can lock this option so that you are prompted for an access code when trying to access it. Refer to chapter Code Del. "" of the system configuration.</p>
	<p>Attention!</p> <p>If you erase the reports of one job number then you will automatically delete the job number from the memory of the device. If you still need the respective job number, you must enter it again after the deletion.</p>
	<p>Attention!</p> <p>The deletion can take up to a couple of minutes.</p> <p>To avoid possible errors in the memory management or loss of data, ensure that the electrofusion control unit is not cut off from power during deletion of the reports. This could lead to the destruction of the electronics!</p> <p>NEVER switch the electrofusion control unit off during the deletion of welding reports.</p>

Step	Action
1	<p>Accessing the menu "Erase reports"</p> <p>1.1 Connect the printer with the USB interface of the electrofusion control unit.</p> <p>1.2 Select the entry "Erase reports" in the function menu, using the ▲ - and ▼ -buttons.</p> <p>1.2 Then press the enter button to select the function.</p> <p>1.3 OPTIONAL: If you have locked the erase function by activating the "Code Del." option in the system configuration you will be prompted for an unlocking- resp. supervisor code. The manufacturer can provide you with an unlocking- resp. supervisor code on request.</p> <p>OPT Read in the unlocking- resp. supervisor code using the reading pen/scanner or press the enter button to do the input by using the letter field. If you use the letter field, press the green start button after the input to confirm the entered code.</p> <p>1.3 OPTIONAL: If you have not locked the erase function in the system configuration ("Code Del." is deactivated by default) a display with job numbers will be shown after pressing the enter button.</p>
2	<p>The menu "Erase reports"</p> <p>2.1 Select the job number that you want to erase and press the green start button.</p> <div style="display: flex; align-items: center; margin-top: 20px;"> <div style="border: 2px solid black; padding: 10px; margin-right: 20px;"> <p>Job no.</p> <p>TEST</p> <p style="text-align: right; margin-top: 20px;">2</p> </div> <div> <p>Display in the menu "Erase reports"</p> </div> </div> <p>▲ ▼ Cycles through the already entered job numbers.</p> <p>Green start button Erase reports of the displayed job number.</p> <p>Red stop button Abort and return to the main display.</p>

*) Only with electrofusion control units that have data recording capability.

12.6 System config.



Different variants of the electrofusion control unit

This instruction manual describes several different variants of the electrofusion control unit. These variants differ in the range of available functions and in the number of menu entries. The differences are pointed out where necessary. Please check which variant you have.

In the menu "System config." different settings and functions of the electrofusion control unit can be changed. Depending on the basic configuration of the device, it is possible that an unlocking- resp. supervisor code is required to gain access to this menu. This restriction can be deactivated in this menu.

Step	Action
<p>1</p> <p>1.1</p> <p>1.2</p>	<p>Accessing the system configuration</p> <p>Select the entry "System configuration" in the function menu, using the ▲- and ▼-buttons.</p> <div data-bbox="272 696 726 907" style="border: 2px solid black; padding: 5px; margin: 10px 0;"> <pre> Contrast >System config. </pre> </div> <p style="text-align: right; margin-right: 50px;">Function menu</p> <p>Press the enter button to access the system configuration.</p>
<p>2</p>	<p>The system configuration</p> <div data-bbox="272 1086 726 1296" style="border: 2px solid black; padding: 5px; margin: 10px 0;"> <pre> + - Language DE < Inv. number Set clock * </pre> </div> <p style="text-align: right; margin-right: 50px;">System config.</p> <p><</p> <p>▲ ▼</p> <p>Enter button</p> <p>*</p> <p>◀ ▶</p> <p>Green start button</p> <p>Red stop button</p> <p>This symbol is the selection indicator that marks the currently selected menu item.</p> <p>These buttons move the selection indicator up and down.</p> <p>The enter button selects the function marked by the selection indicator <.</p> <p>The star shows the status of the option. If the star is in the + row, the respective option is activated. If the star is in the - row, the respective option is deactivated.</p> <p>Pressing these buttons changes the option status (ON/OFF).</p> <p>Pressing the green start button accepts/saves the values and returns to the main display.</p> <p>Pressing the red stop button cancels and returns to the main display.</p>

The following table shows the available functions.

Function	Description	Value	Page
Language	Setting the display language	Short code for language	49
Inv. number	Issuing an inventory number for the electrofusion control unit	Number	50
Set clock	Setting of time and date*	Time	51
Memory control	Memory control*	ON/OFF	51
Daylight time	Automatic changeover for summer and winter time*	ON/OFF	52
Weldername	Prompt for a welder name after switching on the electrofusion control unit*	ON/OFF	52
Job no.	Mandatory input of a job number*	ON/OFF	52
South	Summer-/Winter time for the southern hemisphere*	ON/OFF	53
Cont. numbers	Consecutive numbering of the reports*	ON/OFF	53
Clamping	Additional prompt for clamping before the welding procedure	ON/OFF	54
Code Lock	Activate the locking functions of the controller	ON/OFF	55
Code Sys.	Locking of the system configuration	ON/OFF	56
Code Del.	Locking the option for erasure of reports*	ON/OFF	57
Secure Data	Mandatory input of a code when trying to access report erasing function*	ON/OFF	58
BT on	Switching Bluetooth on and off***	ON/OFF	58
BT only	Operation of the device only possible by app via Bluetooth***	ON/OFF	58

*) Only with electrofusion control units that have data recording capability.

**) Only with electrofusion control units that are SmartFuse capable.

***) Only with electrofusion control units that have Bluetooth functionality.

12.6.1 Language

Step	Action
<p>1</p> <p>1.1</p> <p>1.2</p>	<p>Accessing the language setting</p> <p>Select the entry "Language" in the system configuration, using the ▲- and ▼-buttons.</p> <p>Press the enter button to access the setting of the language.</p>
<p>2</p> <p>2.1</p> <p>▲ ▼</p> <p>Enter button</p> <p>Green start button</p> <p>Red stop button</p> <p>2.2</p>	<p>Setting of the language</p> <p>When the "Language" option is selected, a list of country codes is displayed which represent the languages. (DE = German, GB = English, SE = Swedish, ES = Spanish, IT = Italian, DK = Danish, PF = Portuguese, FR = French, PL = Polish, TR = Turkish, RO = Romanian, etc.) Please note, that the electrofusion control unit has seven languages to choose from.</p> <div data-bbox="269 618 724 831" style="border: 2px solid black; padding: 10px; width: fit-content;"> <p>>DE GB FR</p> </div> <p style="text-align: center;">Setting the language</p> <p>These buttons move the selection indicator up and down. The enter button selects the language indicated by the selection indicator >.</p> <p>Pressing the green start button accepts/saves the values and returns to the main display.</p> <p>Pressing the red stop button cancels and returns to the main display.</p> <p>After having selected the desired language, press the enter button. Acknowledge the following prompt by pressing the green start button to accept the new time and date or cancel the operation by pressing the red stop button.</p>


12.6.2 Inv. number

The inventory number can be defined to identify the electrofusion control unit in your stock. The inventory number can be defined to identify the electrofusion control unit in your stock. You can use the displayed letter field for input or use a barcode together with the reading pen/scanner. The entered inventory number will be shown on the reports.

Step	Action
<p>1</p> <p>1.1</p> <p>1.2</p>	<p>Accessing the setting of the inventory number</p> <p>Select the entry "Inv. number." in the system configuration, using the ▲- and ▼-buttons.</p> <p>Press the enter button to access the setting of the inventory number.</p>
<p>2</p> <p>2.1</p>	<p>Setting the inventory number</p> <p>Use the letter field for input of the desired inventory number.</p> <div data-bbox="272 669 724 880" style="border: 2px solid black; padding: 5px; margin: 10px 0;"> <p>00015</p> <p>Inv. number</p> <p>ABCDEFGHIJKLMNQRST</p> </div> <p>Setting the inventory number with the help of the letter field.</p> <p>For further information on how to operate the letter field read chapter 12.1 "Using the letter field to enter data". After the input of the inventory number press the green start button once to accept the input and when the following confirmation prompt "Are you sure ?"is displayed press the green start button once again to confirm. You can abort the input by pressing the red stop button.</p> <p>By default the device number of the electrofusion control unit is set as inventory number.</p>

12.6.3 Set clock*

After selecting the set clock function from the system configuration menu the display will show the current time and date.

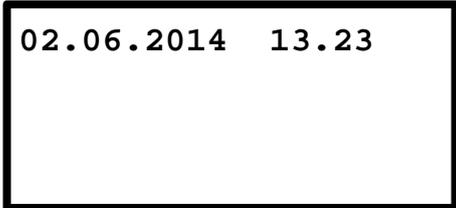Step	Action
1	Accessing the setting of time and date
1.1	Select the entry "Set clock" in the system configuration, using the ▲ - and ▼ -buttons.
1.2	Press the enter button to access the setting of time and date.
2	Setting of the clock
	 <p style="text-align: right;">Setting of the clock</p>
	<p>▲▼ These buttons alter the currently marked value.</p> <p>◀▶ These buttons move the indicator to the next position.</p> <p>Enter button Pressing the enter button confirms the new setting.</p> <p>Red stop button Abort and return to the main display</p>
2.1	Set the time and date accordingly. The value that is currently selected is flashing. Confirm the following safety prompt "Are you sure ?" by pressing the green start button. You can abort the input by pressing the red stop button.

*) Only with electrofusion control units that have data recording capability.

12.6.4 Memory control*

When the memory control option is activated, the electrofusion control unit will not begin another welding procedure as soon as the internal memory is full. This can help to prevent an unintentional loss of data. In any case, you are warned by a display message when switching the electrofusion control unit on as soon as there less than 50 free report spaces available.

Step	Action
1	Accessing the "Memory control" option
1.1	Select the entry "Memory control" in the system configuration, using the ▲ - and ▼ -buttons.
2	Activating resp. deactivating the option "Memory control"
2.1	The ◀ ▶ buttons are used to move the marking (*) from the "activated" (+) column to the „deactivated“ (-) column and vice versa.
2.2	After having this option changed in the system configuration press the green start button to accept the change and acknowledge the following safety prompt "Are you sure?" by again pressing the green start button. You can abort the input by pressing the red stop button.

*) Only with electrofusion control units that have data recording capability.

12.6.5 Daylight time*

With this option, you can activate or deactivate the automatic changeover for summer and winter time. If the automatic changeover is active on the 21st of March resp. on the 21st of October a prompt "Change time" will be shown each time the device is switched on. If the prompt is confirmed by pressing the green start button the respective changeover will be made. If you press the red stop button, the changeover will not be made and the prompt will reappear the next time the device is switched on.

Step	Action
1	Accessing the "Daylight time" option
1.1	Select the entry "Daylight time" in the system configuration, using the ▲ - and ▼ -buttons.
2	Activating resp. deactivating the option "Daylight time"
2.1	The ◀ ▶ buttons are used to move the marking (*) from the "activated" (+) column to the „deactivated“ (-) column and vice versa.
2.2	After having this option changed in the system configuration press the green start button to accept the change and acknowledge the following safety prompt "Are you sure?"by again pressing the green start button. You can abort the input by pressing the red stop button.

*) Only with electrofusion control units that have data recording capability.

12.6.6 Weldername*

If this function is activated, a prompt for entering a welder name is shown after switching on the electrofusion control unit. The can be entered with the help of the displayed letter field.

- After completion of the input, confirm it by pressing the green start button.
- You can skip resp. abort the input by pressing the red stop button.

Step	Action
1	Accessing the "Weldername" option
1.1	Select the entry "Weldername" in the system configuration, using the ▲ - and ▼ -buttons.
2	Changing the "Weldername" option
2.1	The ◀ ▶ buttons are used to move the marking (*) from the "activated" (+) column to the „deactivated“ (-) column and vice versa.
2.2	After having this option changed in the system configuration press the green start button to accept the change and acknowledge the following safety prompt "Are you sure?"by again pressing the green start button. You can abort the input by pressing the red stop button.

*) Only with electrofusion control units that have data recording capability.

12.6.7 Job no.*

If this function is activated, a prompt for the input/selection of job number, under which the report will be stored, is displayed after connecting a fitting. The job number can consist of numbers and letters.

Step	Action
1	Accessing the "Job no." option
1.1	Select the entry "Job no." in the system configuration, using the ▲ - and ▼ -buttons.
2	Changing the "Job no." option
2.1	The ◀ ▶ buttons are used to move the marking (*) from the "activated" (+) column to the „deactivated“ (-) column and vice versa. For further information please read chapter 12.2 „Job no.*“.
2.2	After having this option changed in the system configuration press the green start button to accept the change and acknowledge the following safety prompt "Are you sure?" by again pressing the green start button. You can abort the input by pressing the red stop button.

*) Only with electrofusion control units that have data recording capability.

12.6.8 South*

If this option is activated the automatic changeover between summer and winter time will be done like on the southern hemisphere. Deactivate this option if you are on the northern hemisphere.

Step	Action
1	Accessing the "South" option
1.1	Select the entry "South" in the system configuration, using the ▲ - and ▼ -buttons.
2	Changing the "South" option
2.1	The ◀ ▶ buttons are used to move the marking (*) from the "activated" (+) column to the „deactivated“ (-) column and vice versa.
2.2	After having this option changed in the system configuration press the green start button to accept the change and acknowledge the following safety prompt "Are you sure?" by again pressing the green start button. You can abort the input by pressing the red stop button.

*) Only with electrofusion control units that have data recording capability.

12.6.9 Cont. numbers*

If this option is activated, the reports will be numbered consecutively. If this option is deactivated, the numbering for each job number begins at 0001.

Step	Action
1	Accessing the "Cont. numbers" option
1.1	Select the entry "Cont. numbers" in the system configuration, using the ▲- and ▼-buttons.
2	Changing the "Cont. numbers" option
2.1	The ◀ ▶ buttons are used to move the marking (*) from the "activated" (+) column to the „deactivated“ (-) column and vice versa.
2.2	After having this option changed in the system configuration press the green start button to accept the change and acknowledge the following safety prompt "Are you sure?"by again pressing the green start button. You can abort the input by pressing the red stop button.

*) Only with electrofusion control units that have data recording capability.

12.6.10 Clamping

If this option is activated, another prompt appears before the prompt "Is the pipe scraped and clamped?" specifically asking "Pipes clamped?".

Step	Action
1	Accessing the "Clamping" option
1.1	Select the entry "Clamping" in the system configuration, using the ▲- and ▼-buttons.
2	Changing the "Clamping" option
2.1	The ◀ ▶ buttons are used to move the marking (*) from the "activated" (+) column to the „deactivated“ (-) column and vice versa.
2.2	After having this option changed in the system configuration press the green start button to accept the change and acknowledge the following safety prompt "Are you sure?"by again pressing the green start button. You can abort the input by pressing the red stop button.

Only if this option is available in your electrofusion control unit.

12.6.11 Code Lock

When activating this function the controller checks, if already activated locking functions (depending of the type of controller "Code Sys.", "Code Man.", "Code Del." and "Secure Data") are sufficient to ensure, that their deactivation can only be done after entering an unlocking- or supervisor code to access the system configuration. That way an efficient security measure can be set to prevent, that locking functions can be easily deactivated (bypassed) in the system configuration.

If "Code Lock" is deactivated, the electrofusion control unit can be freely configured to your liking. It is then possible that, for example, "Code Man." can be activated without locking the system configuration by activating "Code Sys." as well.



Attention!

This option can be preset, depending on the device type. Contact your retailer or the manufacturer of the electrofusion control unit before activating this option.

In any case you will need an unlocking- or supervisor code for accessing the locked functions if this option is activated and "Code Sys." is also active.

Step	Action
1	Accessing the "Code Lock" option
1.1	Select the entry "Code Sys" in the system configuration, using the ▲ - and ▼ -buttons.
2	Changing the "Code Lock" option
2.1	The ◀ ▶ buttons are used to move the marking (*) from the "activated" (+) column to the „deactivated“ (-) column and vice versa.
2.2	Please note, that when activating this option, independently from other options that may already be active, "Code Sys." will automatically also be activated. This prevents, bypassing and deactivating of locking functions in the system configuration without an unlocking- or supervisor code.
2.3	After having this option changed in the system configuration press the green start button to accept the change and acknowledge the following safety prompt "Are you sure?" by again pressing the green start button. You can abort the input by pressing the red stop button.

12.6.12 Code Sys.

If this option is activated, the system configuration can only be accessed after entering an unlocking- resp. supervisorcode. If this option is deactivated, each user can change the system configuration. By activating this option, only users with the respective access level can change the system configuration.



Attention!

This option can be preset, depending on the device type. Contact your retailer or the manufacturer of the electrofusion control unit before activating this option.

In any case you will need an unlocking- or supervisor code for accessing the system configuration if this option is activated.

Step	Action
1	Accessing the "Code Sys." option
1.1	Select the entry "Code Sys" in the system configuration, using the ▲ - and ▼ -buttons.
2	Changing the "Code Sys." option
2.1	The ◀ ▶ buttons are used to move the marking (*) from the "activated" (+) column to the „deactivated“ (-) column and vice versa.
2.2	After having this option changed in the system configuration press the green start button to accept the change and acknowledge the following safety prompt "Are you sure?"by again pressing the green start button. You can abort the input by pressing the red stop button.
3	Prompt for the unlocking- resp. supervisor code
	If the option "Code Sys." is activated, the following prompt will appear when trying to access the system configuration. Enter an unlocking- resp. supervisor code here to gain access to the system configuration.
	<div style="border: 1px solid black; padding: 5px; display: inline-block;"> <p>Operatorcode 50 Hz 230 V +23°C</p> </div> <p style="margin-left: 20px;">Prompt for the unlocking- resp. supervisor code</p>
3.1	Read in the unlocking- resp. supervisor code using the reading pen/scanner or press the enter button to do the input by using the letter field. If you use the letter field, press the green start button after the input to confirm the entered code.



Attention!

If "Code Lock" and "Code Sys." are active and "Code Sys." is deactivated, "Code Man.", "Code Del." and "Secure data" will be deactivated automatically as well.

This shall show the user that by deactivating "Code Sys." there will be no sufficient safeguard against manipulation anymore. Without the prompt for the unlocking- resp. supervisor code before getting access to the system configuration the locking functions can easily be deactivated by any user.

12.6.13 Code Del.*

If this option is activated you will have to enter an access code when trying to access the "Erase reports" entry in the device menu.

Step	Action
1	Accessing the "Code Del." option
1.1	Select the entry "Code Del." in the system configuration, using the ▲ - and ▼ -buttons.
2	Changing the "Code Del." option
2.1	The ◀ ▶ buttons are used to move the marking (*) from the "activated" (+) column to the „deactivated“ (-) column and vice versa.
2.2	After having this option changed in the system configuration press the green start button to accept the change and acknowledge the following safety prompt "Are you sure?" by again pressing the green start button. You can abort the input by pressing the red stop button.
3	Menu entry "Erase reports ?" is locked
3.1	Accessing the function "Erase reports".
3.2	If the option "Code Del." is activated, the following prompt will appear:
	<div style="border: 2px solid black; padding: 10px; display: inline-block;"> <p>Operatorcode 50 Hz 230 V +23°C</p> </div> <p style="margin-left: 20px;">Prompt for an unlocking- resp. supervisor code to unlock the erase-function for the stored reports.</p>
3.3	Read in the unlocking- resp. supervisor code using the reading pen/scanner or press the enter button to enter the code by using the letter field. If you use the letter field, press the green start button after the input to confirm the entered code.



Attention!

If "Code Lock" is active when "Code Del." is activated, "Code Sys." will be activated automatically. This ensures, that reports can only be deleted from the memory of the electrofusion control unit if an unlocking- resp. supervisor code is entered beforehand. Additionally "Code Sys." prevents access to the system configuration without an unlocking- resp. supervisor code.

*) Only with electrofusion control units that have data recording capability.

12.6.14 Secure data*

If this option is activated you will not be prompted after printing reports (USB or printer) to delete the printed reports. This prevents deletion by unauthorised personnel.

Step	Action
1	Accessing the "Secure data" option
1.1	Select the entry "Secure data" in the system configuration, using the ▲- and ▼-buttons.
2	Changing the "Secure data" option
2.1	The ◀ ▶ buttons are used to move the marking (*) from the "activated" (+) column to the „deactivated“ (-) column and vice versa.
2.2	After having this option changed in the system configuration press the green start button to accept the change and acknowledge the following safety prompt "Are you sure?" by again pressing the green start button. You can abort the input by pressing the red stop button.



Attention!

If "Code Lock" is active when "Secure data" is activated, "Code Sys." and "Code Del." will be activated automatically.

This ensures, that reports can only be deleted from the memory of the electrofusion control unit if an unlocking- resp. supervisor code is entered beforehand. Additionally "Code Sys." prevents access to the system configuration without an unlocking- resp. supervisor code.

*) Only with electrofusion control units that have data recording capability.

12.6.15 BT on***

If this option is activated, the electrofusion control unit can be detected by other devices via Bluetooth. Pairing with a smartphone or tablet that runs Android or iOS and is connected to the internet is now possible. After successful pairing you can control the electrofusion control unit by using the PFS app.



Attention!

Without prior registration, the connection to the electrofusion control unit will not be possible.

Step	Action
1	Accessing the "BT on" option
1.1	Select the entry "BT on" in the system configuration, using the ▲- and ▼-buttons.
2	Changing the "BT on" option
2.1	The ◀ ▶ buttons are used to move the marking (*) from the "activated" (+) column to the „deactivated“ (-) column and vice versa.
2.2	After having this option changed in the system configuration press the green start button to accept the change and acknowledge the following safety prompt "Are you sure?" by again pressing the green start button. You can abort the input by pressing the red stop button.

***) Only with electrofusion control units that have Bluetooth functionality.

12.6.16 BT only***



Attention!

If this option is activated, the electrofusion control unit can only be controlled by the app via Bluetooth.

To deactivate this option after a restart, you must have permission to access the system configuration.

Step	Action
1	Accessing the "BT only" option
1.1	Select the entry "Compensation" in the system configuration, using the ▲ - and ▼ -buttons.
2	Changing the "BT only" option
2.1	The ◀ ▶ buttons are used to move the marking (*) from the "activated" (+) column to the „deactivated“ (-) column and vice versa.
2.2	After having this option changed in the system configuration press the green start button to accept the change and acknowledge the following safety prompt "Are you sure?" by again pressing the green start button. You can abort the input by pressing the red stop button.

***) Only with electrofusion control units that have Bluetooth functionality.

13. Troubleshooting and maintenance

13.1 Replacement of the welding terminals

The welding terminals should be checked on a regular basis and, if necessary, replaced as soon as they are damaged or lose contact force (see chapter 8 "Spare parts and accessories").

Step	Action
1	Switch off the electrofusion control unit and disconnect it from the mains supply or generator!
2	Pull off the red resp. black PVC cap.
3	Hold the front part of the brass contact with a pipe wrench and screw the welding terminal with a 8 mm wrench out of the brass contact.
4	If your electrofusion control unit is SmartFuse-capable, then note that, when changing the welding terminals, the red terminal contains a probe tip! Only use spare parts and welding terminals provided by PFS.
5	Screw a new terminal plug into the brass piece. Check for firm fit.
6	Shove the PVC cap back over the welding terminal. Approximately 15 mm of the terminal must stand out of the PVC cap.

14. Error messages

Error messages are indicated by a bleep. A permanent bleep can be interrupted by pressing the red stop button.

14.1 General error messages

Code	Error	Cause	Reaction
	EMI Error	Electronic out of order or defect	Contact service
	EMI Error 2	Electronic out of order or defect	Contact service
	Emergency cut-out	Welding was interrupted by pressing the red stop button	Welding is faulty!
	Memory overflow	Report memory is full	Print reports or deactivate the memory control option.
	System error	Danger !Selftest has detected an error in the system.	Immediately disconnect the device from the power supply. Do not connect the device to the power supply. Send the controller to a certified service point
	Clock error	Internal clock does not work properly	Set clock, change battery if necessary
	Service	The recommended service interval of 12 months or 200 working hours are exceeded.	The device must be serviced by certified personnel or a service point. The device remains usable. The manufacturer is not liable until the device has undergone maintenance.

14.2 Error messages before and during the welding procedure

Code	Error	Cause	Reaction
E1	Contact error	Invalid SmartFuse©-detection resistor.	Clean terminals, use another fitting if possible
E2	Power failure	Last welding was interrupted by a break of the power supply.	Last welding is faulty! Prepare pipe again and use a new fitting!
E3	No contact	No sufficient electrical contact with the fitting	Check connection to the fitting.
		Heating coil or welding cable is defect	Use another fitting, change welding cable
E4	Clean SmartFuse tip	Welding contact dirty	Check welding terminal resp.clean it
E5	Code error	Faulty input	Move the reading pen over the barcode in a continuous move with constant speed.
		Barcode defect or error in code structure	
E6	Temperature error	Ambient temperature is out of limit (-10 to +50 °C)	
E7	Temp. meas. error	Temperature measurement is faulty	Plug in the removable welding cable. Switch the device off and on again Welding cable or sensor defect
E8	Resistance error	Fitting resistance is out of the range of operation	Use another fitting.
		Fitting resistance is out of the valid working range when using barcode input	Use another fitting.
E9	Device too hot	Temperature of transformer is too high	Let the device cool down for about 45 min
E10	Frequency error	Input frequency out of working range (40-70 Hz)	Check generator.
E11	Interturn short circuit	Current increases during welding by more than 15 % Short circuit in the heating coil	Welding is faulty!
E12	Input volt. low	Input voltage < 190 V	Fully unwind mains supply cord, use mains supply cord with suitable cross section, readjust generator voltage
E13	Input volt. high	Input voltage > 300 V	Adjust generator voltage to 260 V
E14	Peak Error	Peak value of the input voltage too high	Check generator

Code	Error	Cause	Reaction
E15	Output volt. error	Output voltage deviates from the rated value	Check generator, RPM fluctuates or generator too weak
E16	Current error (DUALMATIC)	Input voltage too high, resistance of the load too low	Check generator, use another fitting
E17	Current low	Momentary interruption of welding current	Welding is faulty!
		Current drops about 15-20 % within 3 s	Welding is faulty!
E18	Current high	Output current is more than 15% higher than the starting current.	Short-circuit in the heating coil or welding cable
E19	Stop button	The red stop button was pressed during the welding process.	
E20	SHORT CUT	Fault in electronics	Contact service
E21	Power error	Output power too high	Use another fitting.

14.3 Error messages during USB data transfer*



Attention!

The USB memory stick is not a suitable medium for permanent storage of data.

Transfer the reports to a PC or Notebook as soon as possible and erase the files on the USB memory stick. Devices with a software version < 2.35 show clear text error messages in the display. Devices with a software version > 2.35 show error codes in the display: "USB Error x". The x represents the number of the error code.



Attention!

It is possible that USB errors resulting from internal errors are not recurring after a restart of the device. To restart, switch the electrofusion control unit off and wait for a few seconds. Then switch the electrofusion control unit on again and retry the action which produced the error. If the error is displayed again, look in the column "Reaction" in the following table.

14.3.1 General USB error messages

Errorcode	Cause	Reaction
USB Error 1	USB-port system failure	Electrofusion control unit must be checked.
USB Error 2	No USB device is plugged in	Plug in a USB device before selecting the USB option.
USB Error 3	Internal checksum error	Electrofusion control unit must be checked.
USB Error 4	Unknown USB error	Electrofusion control unit must be checked.
USB Error 5	Internal error in the USB system.	Electrofusion control unit must be checked.
USB Error 6	The red stop button has been pressed during data transfer.	Do not interrupt data transfer by pressing the red stop button.

*) Only with electrofusion control units that have data recording capability.

14.3.2 Error codes when using a USB memory stick*

Errorcode	Cause	Reaction
USB Error 7	The USB memory stick is not plugged in correctly. The USB memory stick was not detected.	Plug in USB memory stick properly. Remove USB memory stick and plug it in again. Use another USB memory stick.
USB Error 8	File/folder cannot be created.	Remove write-protection of the USB memory stick. Repeat data transfer
USB Error 9	Internal error	Restart the device and repeat action. If the error occurs again, the device needs to be checked.
USB Error 10	Error while writing to a directory.	Restart the device and repeat action. If the error occurs again, the device needs to be checked.
USB Error 11	Error in the number of directories on the USB memory stick.	Restart the device and repeat action. If the error occurs again, the device needs to be checked.
USB Error 12 USB Error 13	Error while creating a file.	Remove write-protection of the USB memory stick. Repeat data transfer If the error occurs again, the device needs to be checked.
USB Error 14 USB Error 15	Internal error	Repeat data transfer If the error occurs again, the device needs to be checked.
USB Error 16	Internal error	Repeat data transfer If the error occurs again, the device needs to be checked.

*) Only with electrofusion control units that have data recording capability.

14.3.3 Error codes when using a USB-printer*

Errorcode	Cause	Reaction
USB Error 17	No PCL-capable printer is connected resp. printer is not supported.	Connect PCL-capable printer and restart printing.
USB Error 18	Printer error	Restart the device and repeat action. If the error occurs again, the device needs to be checked.
USB Error 19 USB Error 20	Printer memory error	Restart printer and repeat action. Test with a different printer.
USB Error 21 USB Error 22 USB Error 23 USB Error 24	Error in printer	Restart printer and repeat action. Test with a different printer. Check printer.

*) Only with electrofusion control units that have data recording capability.

14.3.4 Bluetooth error messages

Errorcode	Cause	Reaction
Checking BT module	Connector loose, defect in Bluetooth module	Restart the device and repeat action. Electrofusion control unit must be checked.
BT module not found	Connector loose, defect in Bluetooth module, Bluetooth module not available	Restart the device and repeat action. Electrofusion control unit must be checked.

***) Only with electrofusion control units that have Bluetooth functionality.

15. Declaration of conformity

We declare herewith under our sole responsibility, that the product described under "Technical data" is compliant to the following standards or normative documents:

Document	Description	Edition	Classification
2006/95/EEC	Low-voltage directive	2007	D

This declaration loses its validity as soon as changes are made to the product without consulting the manufacturer first.

Technical documentation is available at: Achim Spychalski-Merle, CEO
PF-Schweißtechnologie GmbH
Karl-Bröger-Str.10
36304 Alsfeld
Germany


Place, date Alsfeld, 01.06.2017

The declaration printed here represents only an extract. The full document can be provided to you on request.



General

Read complete manual!
Observe fitting manufacturer's installation guide!
Follow national and international directives!

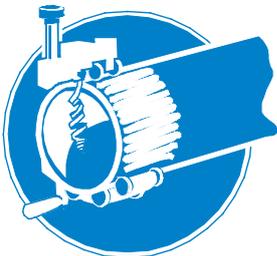


Scraping

Remove dirt from the pipe!
Mark welding area!
Use rotational scraper tools only!




Cleaning

Wipe around the pipe!
Use approved cleaning agent!
Use lint-free cloths!

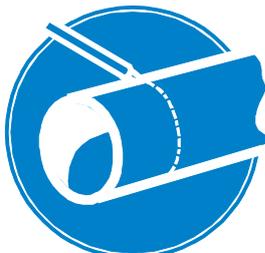

Marking

Do not touch the cleaned welding areas!
Mark insertion depth of fitting!
Use approved markers!

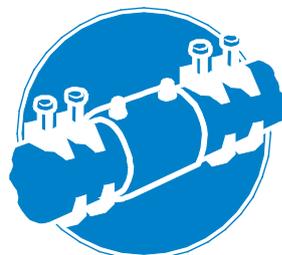

Alignment

Use proper alignment tools!
Avoid mechanical stress on pipes and fitting!
Wait for cooling before pressurising!

PF-Schweißtechnologie GmbH

Karl-Bröger-Straße 10

DE-36304 Alsfeld/Germany

Phone +49 6631 9652-0

E-Mail: info@pfs-gmbh.com

www.pfs-gmbh.com